

## Drum Refresh

Remove image blur and white dots from the printout.



### NOTE

Drum Refresh cannot be performed while printing. Execute Drum Refresh after the printing is done.

#### **1 Display the screen.**

[System Menu/Counter] key > [Adjustment/Maintenance] > [Drum Refresh]

#### **2 Perform the drum refresh.**

Select [Start]. "Drum Refresh" begins.

## Calibration

Using this function enables printing in the most appropriate color by adjusting hue and color drift in detail. When the hue and color drift are not enhanced even after performing calibration, refer to the following:

➔ [Color Registration Procedure \(page 10-30\)](#)

#### **1 Display the screen.**

[System Menu/Counter] key > [Adjustment/Maintenance] > [Calibration]

#### **2 Perform the calibration.**

Select [Start]. "Calibration" begins.

## Laser Scanner Cleaning

Remove vertical lines from the printout.

#### **1 Display the screen.**

[System Menu/Counter] key > [Adjustment/Maintenance] > [Laser Scanner Cleaning]

#### **2 Perform the laser scanner cleaning.**

Select [Start]. "Laser Scanner Cleaning" begins.