

Sending

Checking and Editing Destinations


Check and edit a selected destination.


1 Display the screen.

- 1 Specify the destination.
- 2 Select [Check].

2 Check and edit the destination.

To add a new destination, select [+].

To display details for the destinations, select []. New E-mail addresses and PC folders can be edited if they have been specified.

To delete the selected destination, select [].



NOTE

- When selecting [On] for Entry Check for New Destination, the confirmation screen appears. Enter the same host name and path again, and select [OK].
- When selecting [On] for Destination Check before Send, the confirmation screen appears after pressing the [Start] key.