



Clearing a Staple Jam

Clearing a staple jam of the Inner Finisher


- 1 Open the inner finisher unit.**

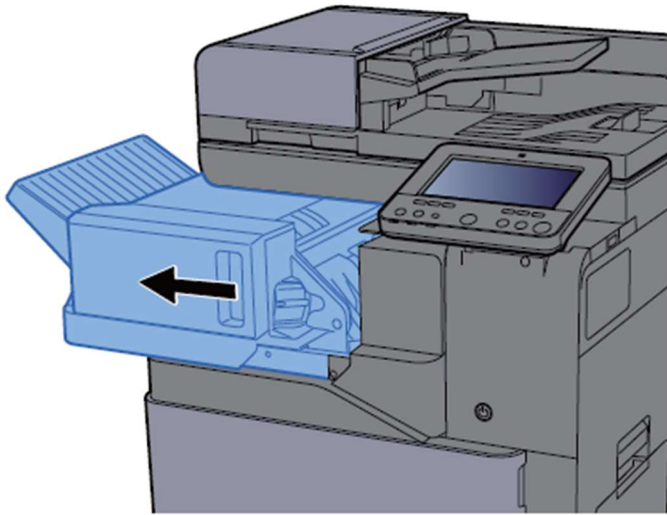


- 2 Remove the Staple Cartridge Holder.**

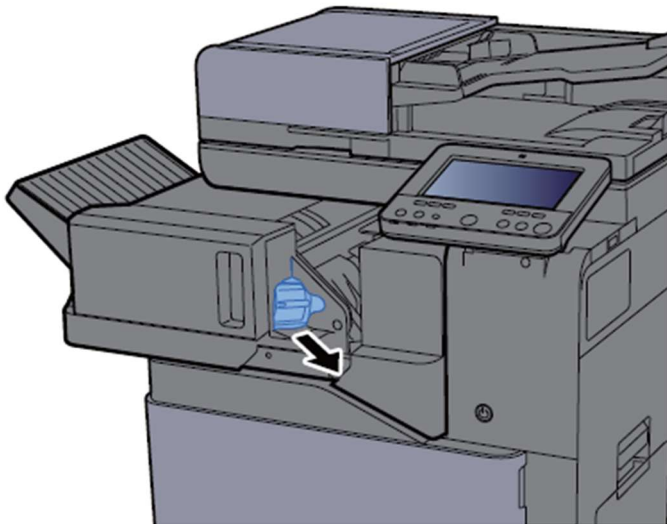

3 Remove the jammed staple.

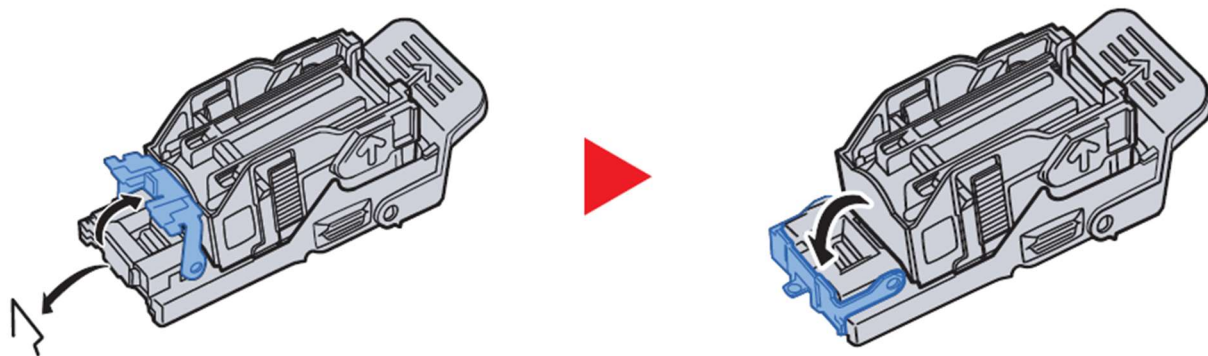

4 Install the Staple Cartridge Holder.

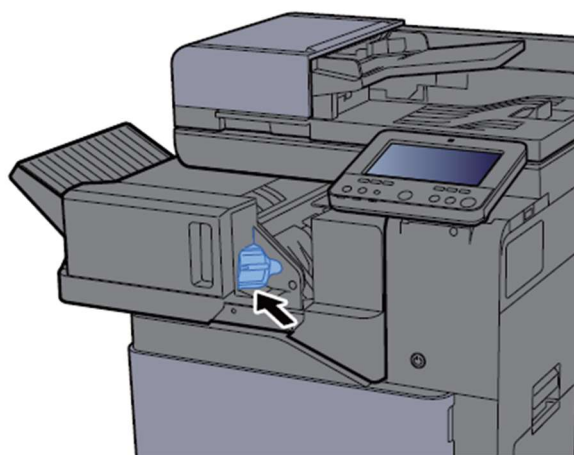

5 Return the unit to the original position.

