


Sending

Confirmation Screen of Destinations

When selecting [On] for Destination Check before Send, the confirmation screen of destinations appears after pressing the [Start] key.

Follow the steps below to confirm the destinations.

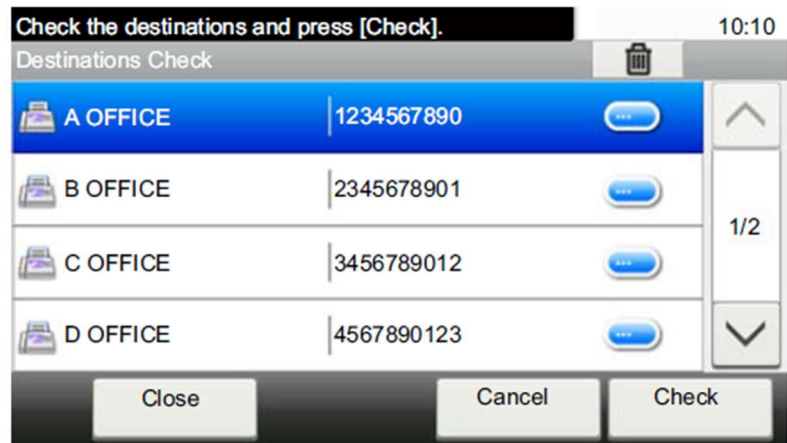

1 Select [∨] or [∧] to confirm all destination.

Selecting [⋮] shows the detailed information of the selected destination.

To delete the destination, select the destination you want to delete > [🗑️] > [Yes]

To add the destination, select [Cancel] and then return to the destination screen.

2 Select [Check].

NOTE

Be sure to confirm all destination by displaying them on the touch panel. You cannot select [Check] unless you have confirmed all destination.

