

# Sending

## Specifying Destination

### Choosing from the One Touch Key

Select the destination using the One Touch Keys.



#### NOTE

This procedure assumes that One Touch Keys have already been registered.

- 1 In the basic screen for sending, select [One Touch Key].**
- 2 Select the One Touch Keys where the destination is registered.**  
If the One Touch Keys for the desired destination is hidden on the touch panel, select [∨] or [∧] to scroll and view next or previous One Touch Keys.



#### NOTE

You can specify a One Touch Key by one touch number by selecting the [Quick No. Search] key.

- 3 Accept the destination > [OK]**  
Destinations can be changed later.

